



Telephone 1

User manual
English & Japanese

JACOB JENSEN™

Congratulations on the purchase of your new JACOB JENSEN™ Telephone 1.

The telephone is designed in Denmark by Jacob Jensen, whose products have gained international recognition for their original, simple and classic design. Jacob Jensen has received about 100 prizes from around the world and has 19 products included in The Design Study Collection and The Design Collection of The Museum of Modern Art in New York.

The JACOB JENSEN™ Telephone 1 is suitable for connection to the public network. The telephone can either stand or be mounted on the wall and is equipped with a memory for 11 numbers, mute function and high or low ringing tone adjustment.

Installation

Table stand

The telephone is supplied with a table stand which you attach as the following:

1. Slide the canals of the table stand into the tracks of the base. The table stand is mounted when you hear a click.
2. Fit the modular contact of the coiled cord into the plug of the handset.
3. Connect the telephone line to the wall outlet.

Wall mounting

The telephone can be mounted on the wall by. Proceed as follows:


1. Disconnect the coiled cord from the handset.
2. Push the button inside the square hole under the modular jack using a pen or a finger, and pull the bracket away from the base at the same time.
3. Pull the telephone line cord downwards through the groove in order to let it out at the bottom and connect it to the wall outlet.
4. Reconnect the coiled cord.
5. Place the telephone on the screws already mounted on the wall (use the template, fig. 4 on page 3).

How to make a telephone call


To lift off the handset, gently press on the upper part of the handset with your index finger and the handset falls into your hand.

- a. Lift off the handset and wait for the dialling tone.
- b. Dial the telephone number.
- c. Put down the handset when the conversation is over.

Hook switch

The telephone is equipped with a magnetic hook switch. To get a new dial tone you can simply press the  key.

Redial






If you wish to redial the last dialled telephone number, you can use the  key and this number is dialled automatically. This number will be stored until the next time a telephone call is made.

Notice: Numbers larger than 31 digits cannot be stored.






One- and two-touch numbers

The telephone has a memory for 11 numbers of max. 21 digits. To store numbers in the memory, proceed as follows:

One-touch number:

- a. Lift off the handset or press .
- b. Press .
- c. Press .
- d. Enter the telephone number you wish to store.
- e. Press .
- f. Hang up the handset or press .

Two-touch numbers:



- a. Lift off the handset or press .
- b. Press .
- c. Press .
- d. Press 0-9 to select a location.
- e. Enter the telephone number you wish to store.
- f. Press  and hang up the handset or press .

A pause can be inserted when storing numbers in the memory e.g. when calling through a switchboard (PABX).

To insert a pause press the  key (e.g. 0  70226033).

Automatic dialling

One-touch number:

Lift off the handset or press , wait for the dialling tone and press .

Two-touch numbers:




Lift off the handset or press , wait for the dialling tone, press  and the selected location 0-9.

Mute function

When the MUTE button on the handset is pressed and held down the microphone is disconnected. When the button is released, the microphone is activated again.

Ringing melody and volume

The telephone has 3 ringing melodies and loudness levels. To change melody and loudness level. Proceed as follows:

- a. Pick up the handset or press .
 - b. Press .
 - c. Press .
 - d. Select by using the numeric keys (please see fig. 3 page 3).
- Note: The telephone is preset to combination no. 6.

R-key

The R-key is used for connecting a telephone call using a switchboard (PABX) and at some special services offered by the telephone company.

Cleaning

Clean the telephone by using a soft cloth. Do not use aggressive chemicals, cleaning solvents or strong detergents.

- The contents of this manual are subject to change without notice.
- The manufacturer and its suppliers accept no liability whatsoever for any damage, expense, loss of profits or any other damage incurred as a result of using this product.

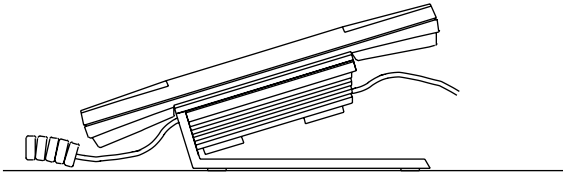


Fig. 1.

Description

1. Base (fig. 1)
2. Numerical keys (fig. 2)
3. Functional keys (fig. 2)
4. Select tone/pulse at the rear side of the base - T/P (fig. 4)
5. Fittings for wall mounting (fig. 4)
6. Coiled cord (fig. 1)
7. Table stand (fig. 1)
8. Microphone-switch (handset - MUTE)
9. Receiver volume control (HI/LOW) at the rear side of the base (fig. 4)

Fig. 3.

Ringing melody and volume

1. Melody A	Low	7. Melody C	Low
2. Melody A	Normal	8. Melody C	Normal
3. Melody A	High	9. Melody C	High
4. Melody B	Low	0. OFF	OFF
5. Melody B	Normal		
6. Melody B	High		

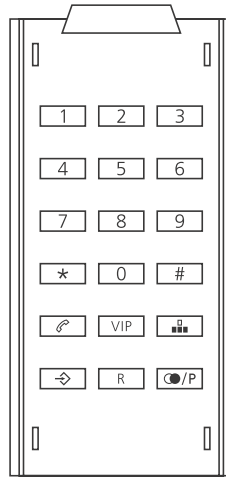


Fig. 2.

Features

- a. one-touch number.
- b. Ten two-touch numbers (0-9).
- c. Hook switch key.
- d. For storing and dialling numbers (0-9).
- e. For storing numbers (VIP, 0-9).
- f. (for switchboard and special services).
- g. For redial or pause.
- h. Mute (on the handset).
- i. Table / Wall mounting.

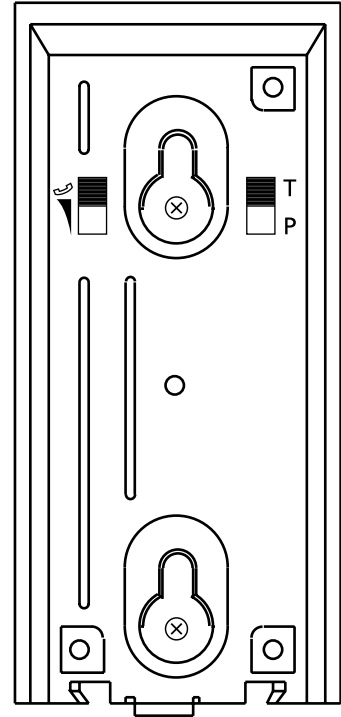


Fig. 4.

For wall mounting please use the screws enclosed.
Mount the screws according to the distance shown in fig. 4 below.
(6 mm drill for plugs).

Consumer information

This equipment is hearing aid compatible.

Notice: If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this Telephone, type TP-0183 does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

Should you experience trouble with this equipment, please contact the distributor in your territory (see further on www.jacob-jensen.com) for repair or warranty information. If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is solved.

IMPORTANT SAFETY INSTRUCTIONS

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

1. Do not use this product near water, for example near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
2. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
3. Do not use the telephone to report a gas leak in the vicinity of the leak.

SAVE THESE INSTRUCTIONS

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the users authority to operate the equipment.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that the interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

JACOB JENSEN™ T-1 テレフォンをお買い上げいただきましてありがとうございます。

このT-1テレフォンは、デンマークのJacob Jensenのデザインによるものです。彼の生み出す製品は、独創性に富むシンプルでクラシカルなデザインにより、国際的な評価を得ています。Jacob Jensenは、これまでに世界各国で100件にのぼる賞を受けており、ニューヨークの近代美術館のデザイン・スタディ・コレクションおよびデザイン・コレクションには、彼のデザインした製品19点が収められています。

T-1テレフォンは、外部電話線につないで使用します。パルス回線及びトーン回線で使用できます。卓上設置と壁掛けの両方に対応し、リダイヤル機能や11件までの番号登録機能やミュート機能を備えるほか、4種類の着信音設定及び2段階の受話音量調節ができます。

<本器の取付け>

A. テーブルスタンドを使用する場合

付属のテーブルスタンドを次の方法で取り付けてください。

- テーブルスタンドの細長い突起部を底部の溝にカチッと音がするまで差し込みます。
- コイル状コードのモジュラーコンタクトを受話器のプラグに差し込みます。
- 電話線を電話コンセント（家庭用のモジュラー式のソケット）につなぎます。

B. 壁掛けの場合

次の方法で本器を壁に取り付けてください。

- 電話線のコードを本体裏面の溝に収納し、本器の下から外に出して壁の電話コンセントにつなぎます。
- 本体にコイル状コードをつなぎます。
- 壁に取り付けたネジ（付属の木ネジ）に本器を取り付けます。

C. テーブルスタンド取り外し方法

- 受話器からコイル状コードをはずします。
- モジュラージャックの下の四角穴の中にあるボタンをペンか指で押しながら、テーブルスタンドを引き抜きます。

<電話のかけ方>

受話器上部を人差し指で軽く押さえると受話器がはずれます。

- 受話器をとってツーンという音が聞こえるのを確認します。
- 電話番号をダイヤルします。
- 電話をかけ終わったら受話器を戻します。

<フックスイッチ>

本器は、マグネティック・フックスイッチ機能を備えています。

☑キーを押すだけで、新たに電話をかけることもできます。

<リダイヤル>

相手が話し中だったり、もう一度電話をかけなおしたいときには、☑キーを押すと同じ番号が自動的にリダイヤルされます。

この番号は、次に別の番号をダイヤルするまで保存されます。

注：番号の桁数が31を超える場合は保存されません。

<ワンタッチナンバー／ツータッチナンバー登録>

本器は、最大21桁の電話番号を11件まで登録できるメモリー機能を備えています。

電話番号の登録は次の方法で行います。

A. ワンタッチナンバー

- 受話器をとります。または☑キーを押します。
- ☞キーを押します。
- ☑キーを押します。
- 登録する番号を入力します。
- ☞キーを押します。
- 受話器を戻します。または☑キーを押します。

B. ツータッチナンバー

- 受話器をとります。または☑キーを押します。
- ☞キーを押します。
- ☑キーを押します。
- 0～9のキーを押してロケーションを選択します。
- 登録する番号を入力します。

- ☞キーを押してから、受話器を戻すか、または☑キーを押します。

※番号をメモリー登録する際にポーズを挿入することもできます。ポーズを挿入するには☑キーを押します。（例：0☑70226033）

<自動ダイヤル>

- ワンタッチナンバー：受話器をとるか、または☑キーを押して、ツーンという音が聞こえたら☑キーを押します。
- ツータッチナンバー：受話器をとるか、または☑キーを押して、ツーンという音が聞こえたら☑キーを押し、0～9のキーで登録した番号を選択します。

<ミュート機能>

受話器のミュートボタンを押し続けている間は、通話用マイクがオフの状態になります。ボタンをはなすと通話用マイクはオンの状態に戻ります。

<着信音設定>

T-1テレフォンには、4種類の着信音設定があります。

- 受話器を持ち上げます。または☑キーを押します。
- ☞キーを押します。
- ☑キーを押します。
- Fig 3の表を参考にして0～9のキーを押します。

<Rキ>

この☑キーは、交換機（PABX）を通して電話をつなぐ際や電話会社の特殊サービスを利用する際に使います。

<本器の清掃>

ほこりっぽい場所やよごれが付きやすい場所での使用は避けてください。直射日光が当たる場所や、熱源の近くも望ましくありません。

又、過度の湿気にさらさないで下さい。汚れた場合は、中性洗剤をほんの少し溶かした水に柔らかい布を浸し、固く絞ってふいて下さい。

- ・ 本機の仕様は予告なく変更されることがあります。
- ・ 本製品の使用により生じたいかなる損害、支出、利益損失またはその他の損害のいずれについても、製造者および供給者は一切責任を負いません。

JACOB JENSEN T-1 JP 電話機 仕様

ダイヤル方式：パルス回線及びトーン（プッシュ）回線

電力供給は電話回線（別途電源は必要ありません）

サイズ：W45xD200xH70mm / 約150 g (受話器部分)

設置方式：テーブルスタンド / 壁掛け

ISDN ・ IP電話対応可

（それぞれの機器の取扱説明書をご確認ください。）

主な機能

- ：ワンタッチダイヤル(1件)
- ：ツータッチダイヤル（メモリー10件）
- ：ミュート機能
- ：着信音設定(4種類10段階)
- ：受話音量調節2段階
- ：リダイヤル機能

同梱内容

- ：本体
- ：受話器
- ：テーブルスタンド
- ：木ネジ2個
- ：取扱説明書
- ：保証書

輸入元・日本総代理店：株式会社ピーオーエス

〒359-1131 埼玉県所沢市久米1416-1

Phone 04-2925-6100

Fax 04-2925-6211

e-mail info@posjapan.co.jp

JATE: T-1 JP A04-0194005

P.O.S. Co. Ltd. JAPAN

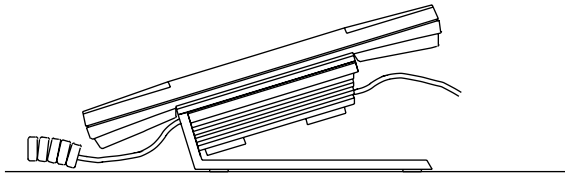


Fig. 1.

図解

1. ベース (fig.1)
2. 各ナンバーキー (fig.2)
3. 各機能キー (fig.2)
4. パレス回線とトーン (プッシュ) 回線の切り替え。切り替えは本体裏面のスライドスイッチで行います (T/P) (fig.4)
5. 壁掛けの取付け (fig.4)
6. コイル状コード (fig.1)
7. テーブルスタンド (fig.1)
8. マイクロフォン・スイッチ (受話器にセット - MUTE)
9. 受話音量コントロール (高/低)。切り替えは、本体のスライドスイッチで行います (fig.4)

Fig. 3.

(数字はfig.2のダイヤル番号)

- | | | | |
|-------|---|-------|---|
| 1. A音 | 低 | 7. C音 | 低 |
| 2. A音 | 中 | 8. C音 | 中 |
| 3. A音 | 高 | 9. C音 | 高 |
| 4. B音 | 低 | 0. 無 | 音 |
| 5. B音 | 中 | | |
| 6. B音 | 高 | | |

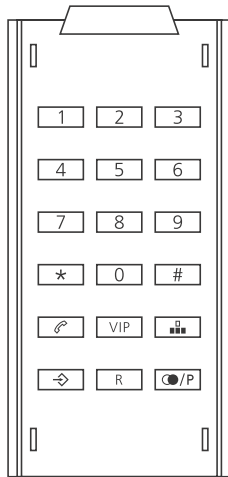


Fig. 2.

特徴

- a. ワンタッチナンバーのためのキー **VP**。
- b. ツータッチナンバーのための各キー (0~9)。
- c. フックスイッチキー。
- d. 番号を記憶するためのキー。
- e. 番号を記憶するためのキー。
- f. **R** Rキーは交換機で使用するためのキー。
- g. リダイヤルまたは、ポーズするためのキー。
- h. ミュート機能。受話器にセットされたMUTEキー。

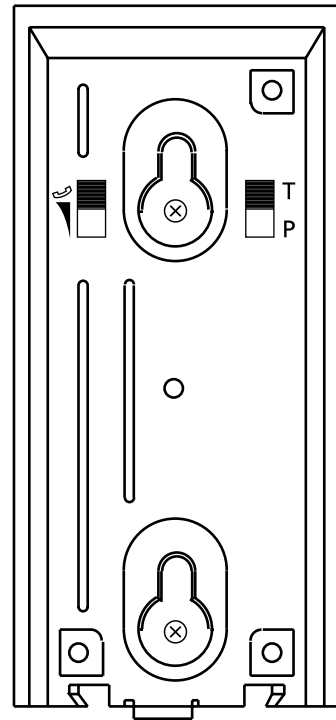


Fig. 4.

付属の木ネジで壁に取付けるための参考図。
左記のfig.4で、示す距離に合わせて付属の木ネジを取付けてください。

Product by: Bell Xpress A/S, Denmark · www.bellxpress.dk

www.jacobjensen.com



Generation to generation...